


# Generator Building

# Communications Building

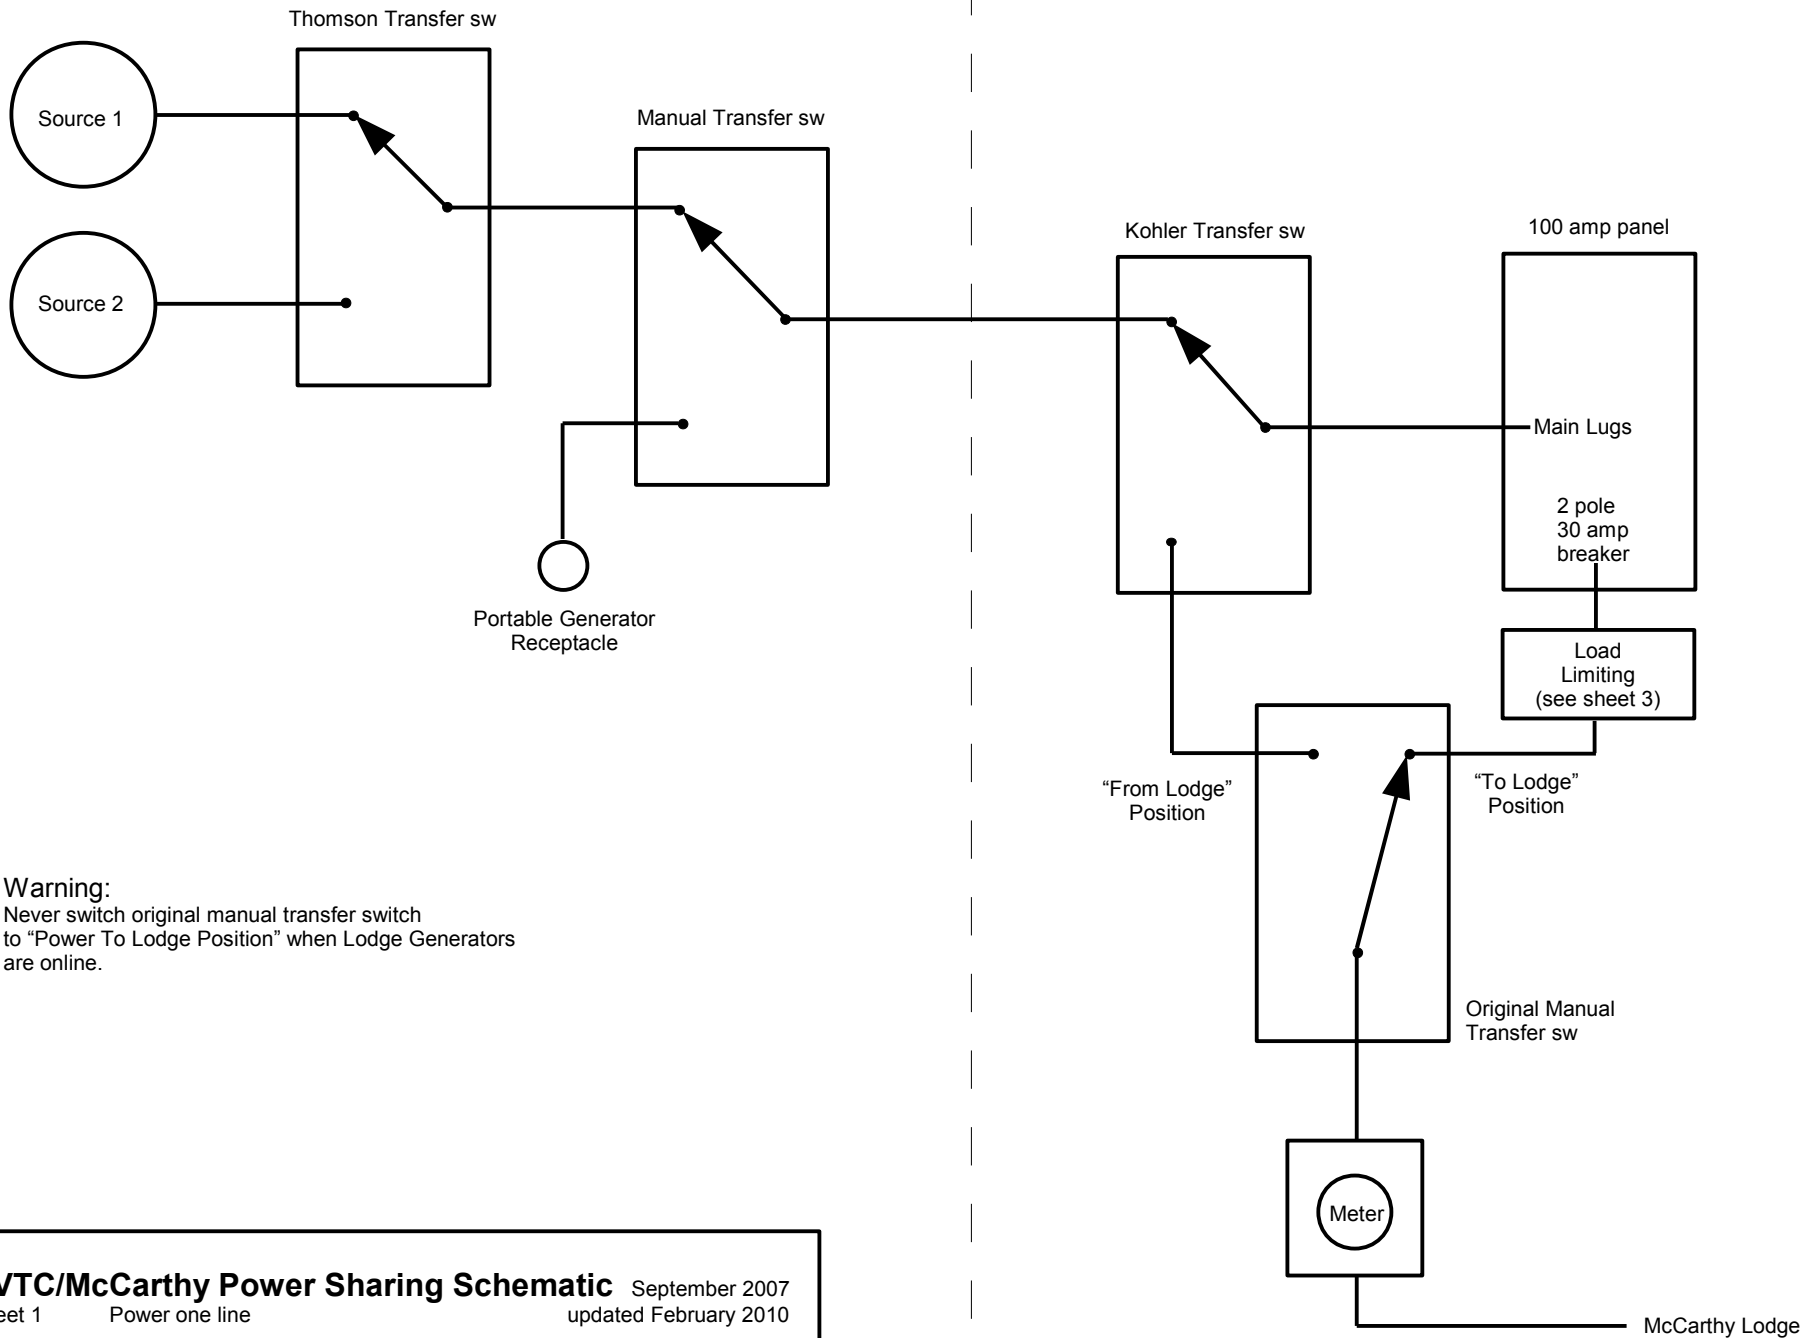

**Warning:**  
Never switch original manual transfer switch to "Power To Lodge Position" when Lodge Generators are online.

